

	Note: issuing AT#NITZ<CR> is the same as issuing the Read command. Note: issuing AT#NITZ=<CR> is the same as issuing the command AT#NITZ=0<CR>.
AT#NITZ?	Read command reports whether automatic date/time updating is currently enabled or not, and whether Network Timezone unsolicited indication is enabled or not, in the format: #NITZ: <val>,<mode>
AT#NITZ=?	Test command returns supported values of parameters <val> and <mode> .

3.5.5.1.39 #BND - Select Band

#BND - Select Band	
AT#BND[= [<band>]]	Set command selects the current band. Parameter <band>: 0 - GSM 900MHz + DCS 1800MHz 1 - GSM 900MHz + PCS 1900MHz 2 - GMS 850MHz + PCS 1800MHz (available only on quadri-band modules) 3 - GMS 850MHz + PCS 1900MHz (available only on quadri-band modules) Note: This setting is maintained even after power off.

